

Chevrolet Captiva 2013->



Konsole positionieren
Blech einschieben



Position console
Insert metal plate



Innerhalb des Handschuhfaches die beiliegende Schraube ins Blech
eindreihen



Mount enclosed screw into metal plate within glove box



Änderungen vorbehalten Subject to change


Chevrolet Captiva 2013->



Positionnez la console
Insérez la tôle



Posicione la consola
Introduzca la chapa

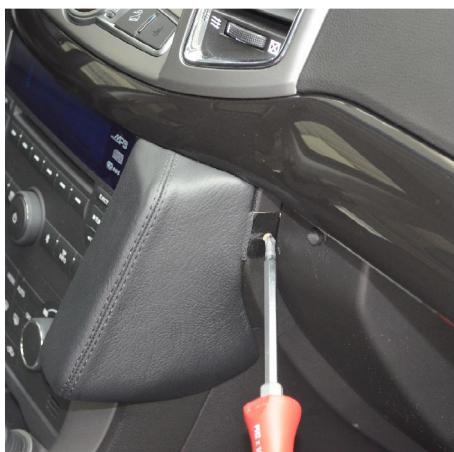

Vissez la vis jointe à l'intérieure de la boîte à gants dans la tôle



Dentro de la guantera atornille el tornillo adjunto en la chapa




Chevrolet Captiva 2013->



Console positioneren
Uniklem insteken



Konsole umiejscowic
Blaszke zagiac za tapicerke od strony pasazera.

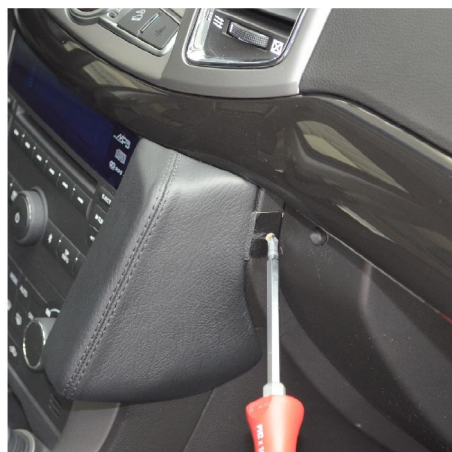

In het dashboardkastje de meegeleverde schroef in het metalen lip draaien



W wewnatrz schowka przykrecic zalaczona srube



Nous nous réservons la possibilité de modification Salvo posibles modificaciones